



# SCP CUBE

## New-Generation Supercapacitor Industrial Power Backup Solution



### Features

- Designed for industrial box PC & panel PC
- Maintenance free supercapacitors
- Safe and reliable; no danger of fire or explosion
- No danger of overcharging
- Fully discharged for safety
- Environmentally friendly without hazardous materials
- Wide operating temperature range (-20°C to 70°C)
- Multi-function control utility

### System

Chip	High current supercap backup controller
------	---

### Supercapacitor

Capacity	400 Farads / each
----------	-------------------

### Power Requirement

Power Input	DC 12~28V input support
-------------	-------------------------

Power Output	DC 12V / 24V output with switch support
--------------	---

### I/O

Power In	1 x 3-pin terminal block
----------	--------------------------

Power Out	1 x 3-pin terminal block
-----------	--------------------------

Switch	1 x slide switch for power output control
--------	---

USB	1 x Type-A connector
-----	----------------------

COM	1 x COM with RS-232
-----	---------------------

### Environmental

Operating Temp.	-20°C ~ 70°C (-4°F ~ 140°F)
-----------------	-----------------------------

Storage Temp.	-30°C ~ 80°C (-22°F ~ 158°F)
---------------	------------------------------

Operating Humidity	10 ~ 95% RH @ 60°C (non-condensing)
--------------------	-------------------------------------

Vibration	0.5 Grms/5~500Hz/random operation (w/ CFast/SSD)
-----------	--

Shock	Operating 10G (11ms), Non-operating 30G
-------	---

### Mechanical

Mounting	Din Rail Mount with Bracket
----------	-----------------------------

Chassis	Din Rail-mounting chassis, and SGCC steel chassis
---------	---

Weight	2.2 kg (4.85lb)
--------	-----------------

Dimensions (W x H x D)	100 X 150 X 187.4 mm (3.94" x 5.91" x 7.38")
------------------------	--

### OS Support

Windows	
---------	--

### Ordering Information


SCP-43	4S3P supercap power backup system
--------	-----------------------------------

SCP-41	4S1P supercap power backup system
--------	-----------------------------------

**Note:** To download USB-to-COM driver and SCP Cube Utility, please visit ARBOR website and locate the driver page of the SCP Cube.



## Dimensions

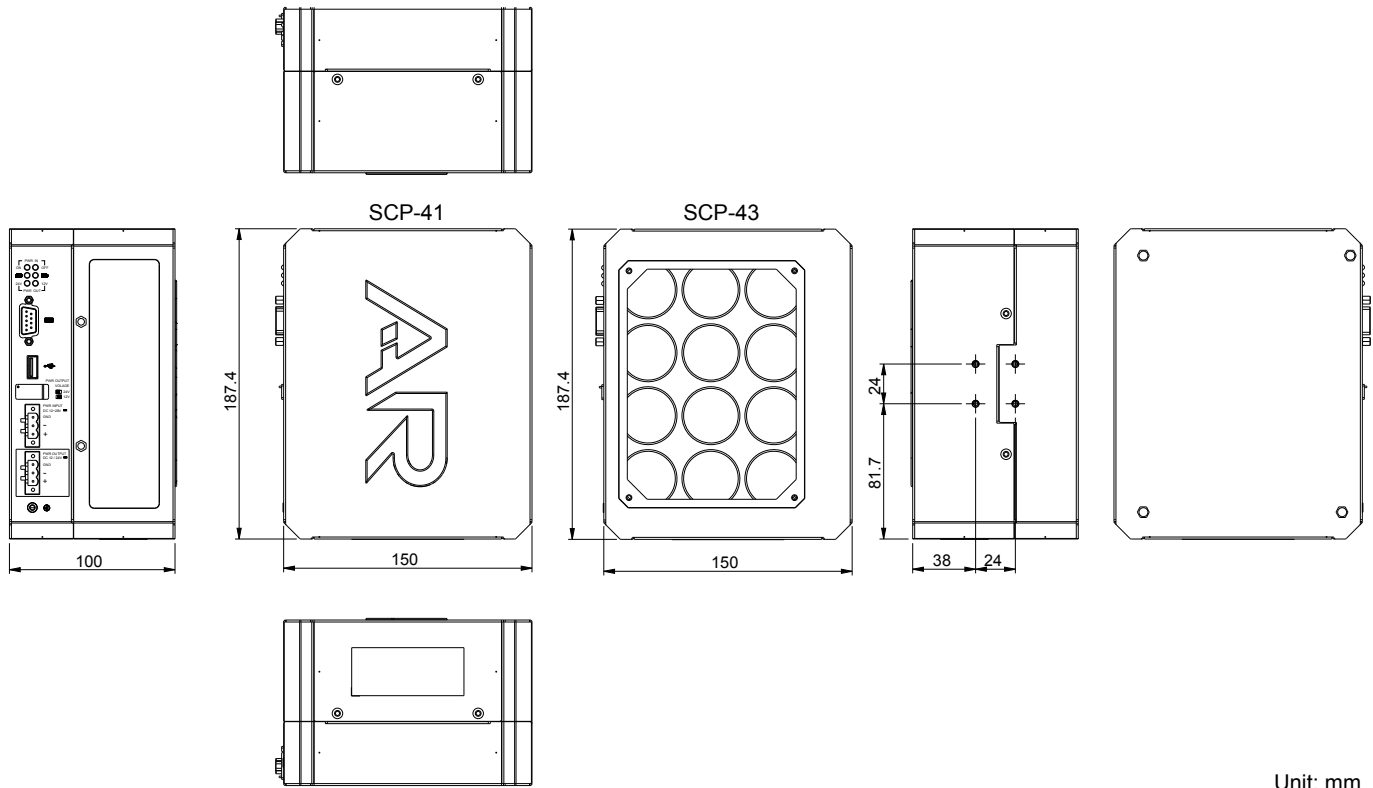

Unit: mm

## Backup Time vs Load Chart

